

Como Chequear el Sensor de Temperatura

TEMP.	R(Kohm)	TEMP	R(Kohm)	TEMP	R(Kohm)	TEMP	R(Kohm)
-8	20.598	3	12.426	14	7.760	25	5.000
-7	19.644	4	11.889	15	7.447	26	4.811
-6	18.732	5	11.378	16	7.148	27	4.630
-5	17.881	6	10.893	17	6.863	28	4.457
-4	17.068	7	10.431	18	6.591	29	4.292
-3	16.297	8	9.991	19	6.332	30	4.133
-2	15.565	9	9.573	20	6.084	31	3.981
-1	14.871	10	9.174	21	5.847	32	3.836
0	14.212	11	8.795	22	5.621	33	3.697
1	13.586	12	8.433	23	5.404	34	3.563
2	12.991	13	8.089	24	5.198	35	3.435